

Quick Start Guide

MeshAP 5100 Dual-Radio WiFi Mesh Network Access Point

Hardware Setup


Package Contents

- MeshAP 5100
- Antennas 5GHz (x2)
- Antennas 2.4GHz (x1)
- RJ-45 Connector (X1)
- Coax-Seal (10")


- 1 Connect each antenna to an antenna socket

Once the antennas are connected with the N-type connector, apply the Coax-Seal for better moisture & corrosion protection

Once the antennas are connected with the N-type connector, apply the Coax-Seal for better moisture & corrosion protection

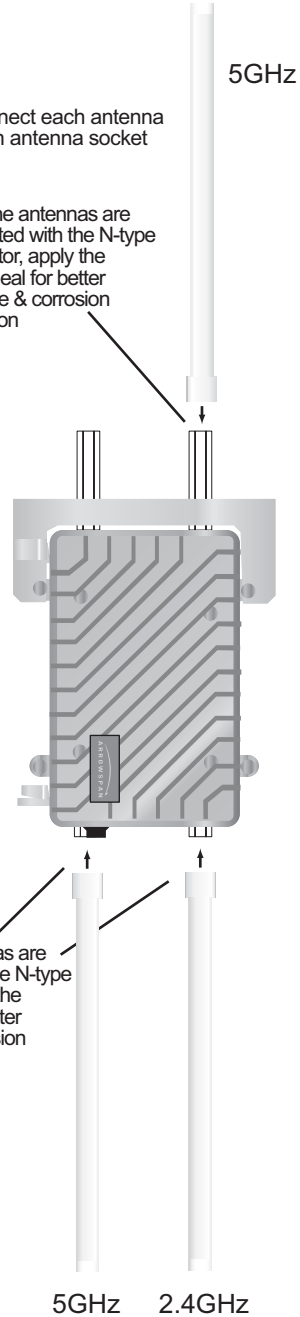

- 2 Connect one end of the Ethernet cable to the Ethernet port and another end to the POE (Power over Ethernet) injector

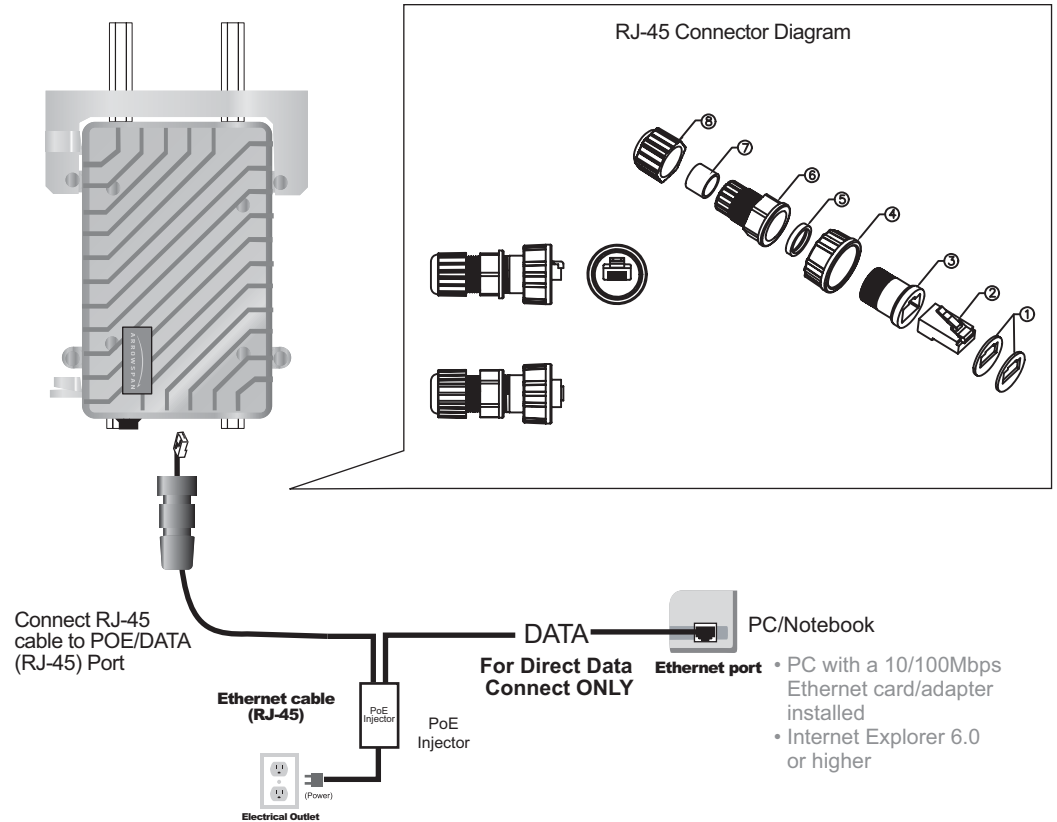

Instructions

1. Make sure PC or notebook IP address is set to: **192.168.1.xxx** and subnet mask is set to: **255.255.255.0**
2. Launch Web Browser (Internet Explorer or Firefox)
3. Enter **192.168.1.8** at the address bar of the web browser and press Enter to access the Access Point
4. UserName: **admin** Password: **admin** Click "OK"